











Activation of Optional Equipment DT 220 B

- While system is switched off (12 V off) press the buttons MENUE and OK for at least five seconds to enter the set-up menu.
- The code number request appears (PIN: xxxx).
- Press the OK button and the first digit flashes. Set the first code number by pressing the + or – buttons, confirm by pressing OK, the second digit flashes, etc ...
- After confirming the fourth code number by pressing the OK button, the first symbol of the options which can be activated or deactivated appears flashing.
- The flashing symbol can be selected on or off by pressing the + or – buttons (or 2ON/3ON/OFF with the Duo-/Triomatic gas pressure regulator system). Press the OK button to confirm. The symbol stops flashing and by pressing the MENUE button the next option can be selected.
- To exit the set-up menu, press the 12V-button or simply wait for 30 seconds.

Symbol displayed if activated	Function (Sequence of Appearance)	Parameter Number	
	Step alarm	1	<input type="checkbox"/>
	Duomatic/Secumotion + Eis-Ex	2	<input type="checkbox"/>
	Triomatic with Eis-Ex	32	<input type="checkbox"/>
	Display of solar current	4	<input type="checkbox"/>
	Capacitive wasser tank sensor	8	<input type="checkbox"/>
	Waste water tank 2	16	<input type="checkbox"/>
	Sewage tank	64	<input type="checkbox"/>
	Water tank 2	128	<input type="checkbox"/>
	Wasser pump function	256	<input type="checkbox"/>
	Waste water tank heating	512	<input type="checkbox"/>

- The parameter number shown on the last page of the main menu represents the sum of all activated options.

Examples:

0001 → Step alarm 1 (default value)

0007 → Step alarm 1, Duomatic 2 and display of solar current 4